

Waldorf 23-5/8" Basin US-WF0613 Waldorf Pedestal Base US-WF0101

Installation Instructions



Introduction

All parts have been fully inspected throughout the production process and only leaves our factory after a 15-stage QC process.

Carefully remove the items from the box and check that all parts have been supplied.

Installation should be completed by at least two suitably competent installers

Before beginning installation, please check for any damage that may have occurred during transport. **Note: Damage claims cannot be made during or after installation.**

Improper installation shall result in loss of warranty in case of damage caused by impacts or rubbing against rough surfaces.

Wall fixings are not supplied. Source fixings which are suitable to the site wall.

IMPORTANT: Please read these instructions carefully before beginning and retain for future reference.

We do not accept responsibility for any problems that may occur through incorrect installation.

Installation notes

The installation must comply with all plumbing codes including local codes and be installed by a licensed plumbing contractor.


Assemble the parts on a mat to protect against scratching the surface.


Avoid getting cement, grit, sand or masonry products on to the surface. Protect and cover the products during the installation period to prevent damage from occurring.


IMPORTANT: Turn off the main water supply before connecting to any existing pipework or doing any maintenance.

WARNING! Please check for any hidden pipes and cables, electric or otherwise, before drilling holes in a wall or floor.

Dimensions

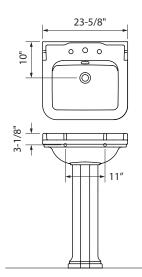

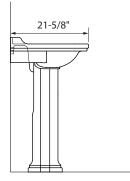




Tools required

Tape

measure


Installation - pedestal

• Install 2x6 backing behind the finished wall.

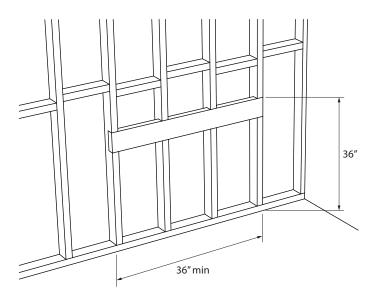

2 Installation - pedestal

• Mark the center line on the floor.

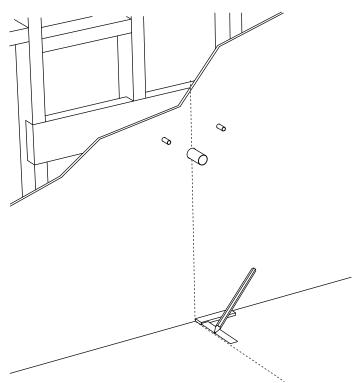



3 Installation - pedestal

- Set the basin on the pedestal and against the wall. Adjust the pedestal if necessary.
- Mark the two basin fixing holes on the finished wall.

4 Installation - pedestal


- Move the basin and pedestal aside. Drill 14" holes at the marked locations.
- Install hanger bolts so they extend 1-1/2" beyond the finished wall.

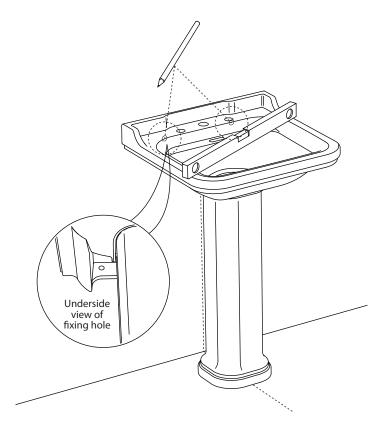

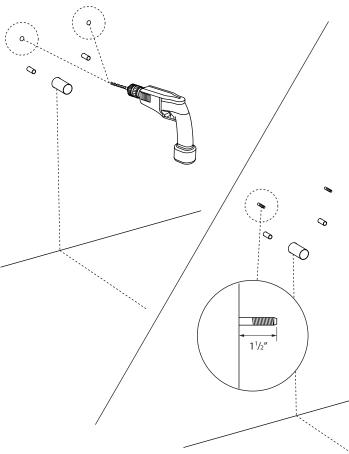


Installation - pedestal

- Position the basin on the pedestal so the hanger bolts extend through the fixing holes.
- Level and secure the basin using cap nuts and washers. **DO NOT OVERTIGHTEN!**

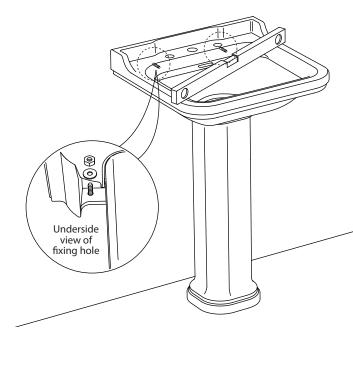


- 6 Installation pedestal
- Apply sealant.
- Fit overflow cap.

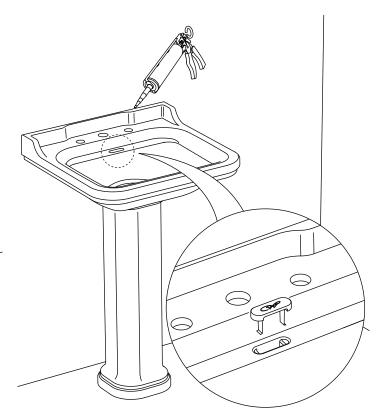


Installation - wall

• Install 2x6 backing behind the finished wall.

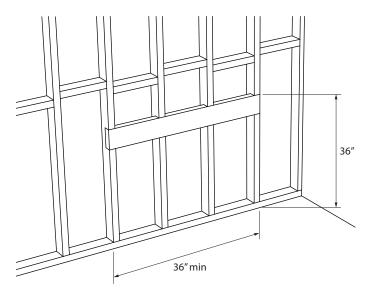

2 Installation - wall

• Mark the horizontal center line on the wall.

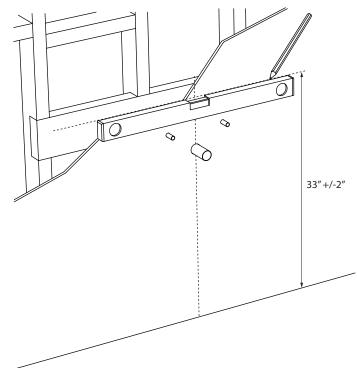


Installation - wall

• Mark the two basin fixing holes on the finished wall.

4 Installation - wall

- Drill ¼" holes at the marked locations.
- Install hanger bolts so they extend 1¹/₂" beyond the finished wall.

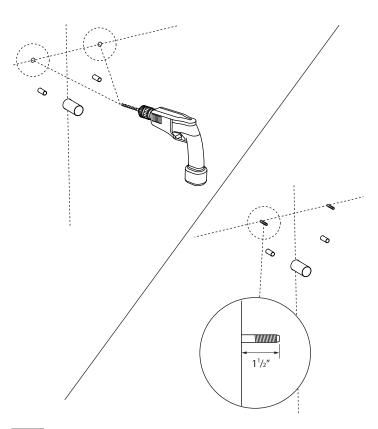



5 Installation - wall

- Position the basin on the hanger bolts through the fixing holes.
- Level and secure the basin using cap nuts and washers. **DO NOT OVERTIGHTEN!**

6 Installation - wall

- Apply sealant.
- Fit overflow cap.

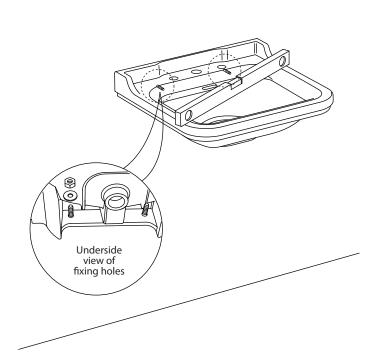

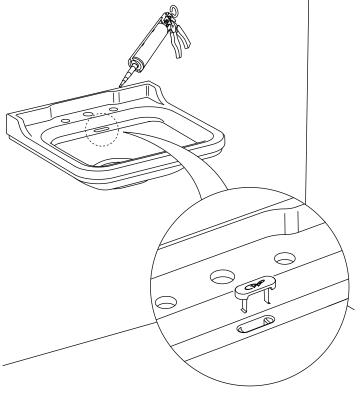

Cleaning Instructions

A simple routine of regular care will keep your fireclay products clean and fresh.

Rinse away any traces of soap and gently dry with a clean soft cloth after each use. A mild detergent, warm water and a soft cloth will remove normal dirt and soap accumulations from surfaces. Soft abrasive cleaners may be used on vitreous china and fireclay. Never use abrasive cleaners without water. Do not use caustic cleaners or disinfectants as they can alter the surface finish and void the warranty.

Do not allow certain materials such as toothpaste, cologne, shaving cream, nail polish remover, vinegar, wine, drain and glass cleaners to remain on the surface. Prolonged contact can alter surface finishes and void the warranty.