


1000 and 1500 Trim

US-ARCV34, US-ARCV35 US-BL1000, US-BL1500 US-PRO1000, US-PRO1500 US-WF1000, US-WF1500 US-WP1000, US-WP1500

Installation Instructions

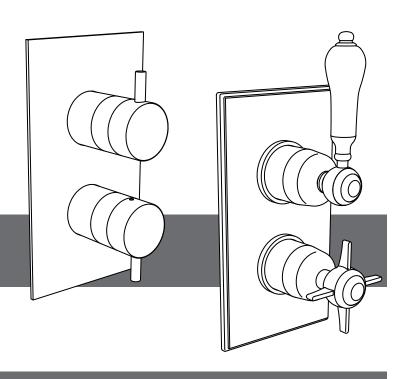



Introduction

The installation must comply with all plumbing codes including local codes. **NOTE:** Image shows single-outlet trim kit. Please follow the same steps if you have a multi-outlet valve.

NOTE: These instructions also apply to lever and cross handle versions. Please make sure you place in correct orientation if there are etchings on the front of the handle.

Fitting isolating valves to the inlet feeds is recommended for ease of maintenance.

INSTALLATION: Turn off the main water supply before connecting to any existing pipe work.


WARNING! Please check for any hidden pipes and cables, electric or otherwise before drilling holes in a wall.

Before beginning installation, check for any damage that may have occurred during transport. **Damage claims cannot be made during or after installation.**

1 Installation 1000 rough


- Follow install guide for 1000 valve rough.
- Attach collars by turning these into the valve.


Tools required

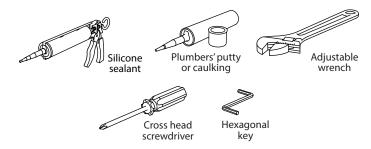

1 Installation 1500 rough

- Follow install guide for 1500 valve rough.
- Attach collars by turning these into the valve.

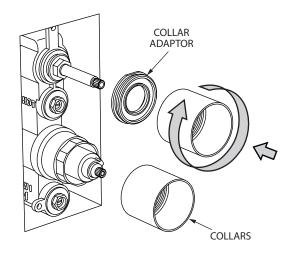

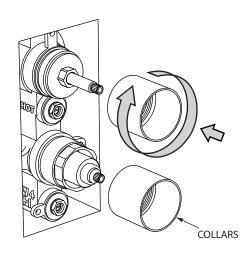

Installation

- Remove the adhesive tape film on the backside of the cover plate.
- Apply a narrow bead of clear silicone sealant around the back edge of the cover plate and carefully press into position. Please make sure you place in correct orientation if there are etchings on the front of the cover plate.
- Fit the control handles by lining up the flat surface of the valve cover with the grub screw on the handle and tighten the screw with an hexagonal key.

