


## Patinato 66 Bathtub

US-N3BCS



# Installation Instructions

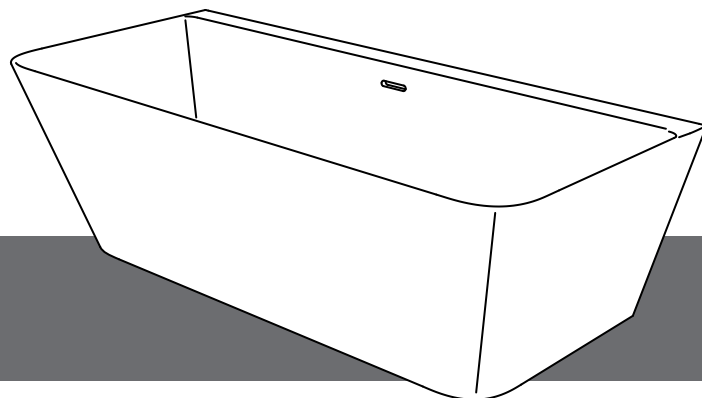

## Introduction

This bathtub has been fully inspected throughout the production process and only leaves our factory after a 15-step QC process. Unpack and inspect the bathtub before removing the fixture being replaced, if applicable.

Carefully remove the bathtub from the box, taking care the bathtub is carried in the bag. Check that all parts have been supplied.

Before beginning installation of the bathtub please check for any damage that may have occurred during transport. **Note: Damage claims cannot be made during or after installation.**

Improper installation shall result in loss of warranty in case of damage caused by impacts or rubbing against rough surfaces.

Prior to installing the bathtub prepare a connection of water inlet/outlet. Pay attention to leveling of floor where the bathtub will be located, ensuring it can take the weight of the bathtub, water and bather(s). The customer may choose the type and location of the faucets, installation instructions should be supplied by the faucet manufacturer. The installation procedure of the bathtub may differ from that described in the installation instructions, depending on where you wish the bath tub to be located.

Wet surface of the bathtub may create a risk of slipping which may increase by using soap, shampoo, oils and similar products.

**IMPORTANT: Please read these instructions carefully before beginning and retain for future reference.**

**We do not accept responsibility for any problems that may occur through incorrect installation.**

### RECOMMENDATIONS:

- Walls and floor should be fully tiled and finished before installation. This ensures that the product is installed flat to the tile face and allows the product to be easily removed in future, if required.
- Remove the protective packaging **after** installation of the bathtub.
- Only fill the bathtub with water up to 2/3 of its height.
- Use **US-BTW0231** and **ITD5135** waste flow products with this bathtub.

## Installation notes

The installation must comply with all plumbing codes including local codes and be installed by a licensed plumbing contractor.

Store the bathtub in a safe place until you begin installation to avoid any damage.

Assemble the bathtub on a mat to protect against damage to the bath tub surface.

Avoid getting cement, grit, sand or masonry products on to the surface.


Protect and cover the bathtub during installation, other tradesmen might damage the bath if no precautions are taken.

Never use brown tape or gaffer tape directly on to the surface. If the bath has to be repacked remember to avoid taping directly on to the surface of the bath tub.

**IMPORTANT: Turn off the main water supply before connecting to any existing pipe work or doing any maintenance.**

**WARNING! Please check for any hidden pipes and cables, electric or otherwise, before drilling holes in a wall or floor.**

## Dimensions

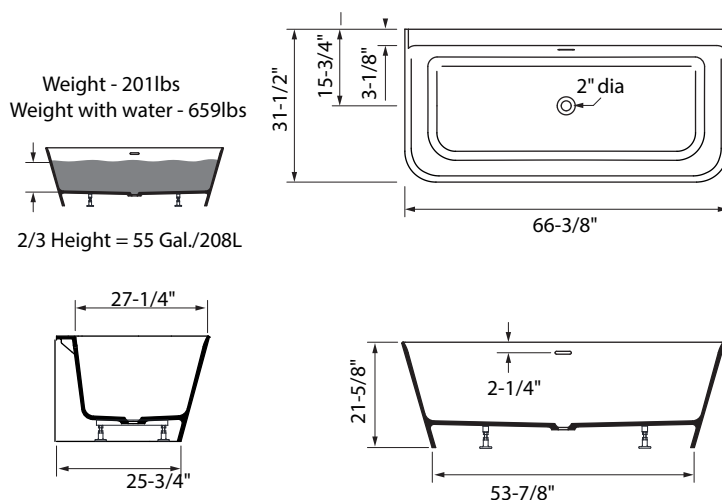


## Tools required




Tape measure




Safety glasses

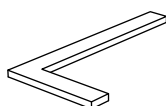


Set square

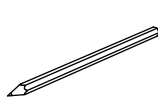

Pencil

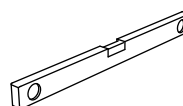

Spirit level

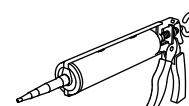


Silicone sealant

## 1 Installation - carriage


### IMPORTANT:

This bathtub is VERY heavy and installation requires 3 people. Crosswater London cannot accept responsibility for any injuries caused to those attempting to install this bathtub without adequate and appropriate tools or resources.


- Remove the bathtub from the packaging area using the bag with handles.
- Use the bag with handles to lift and move the bathtub.

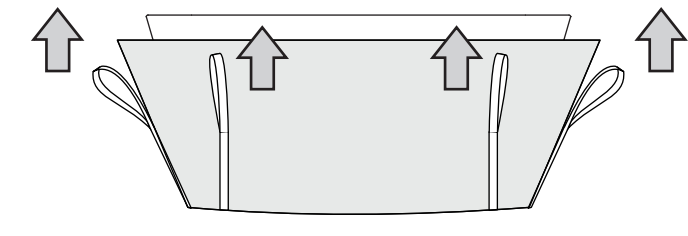


- **Do not** drag the bathtub over rough surfaces or sharp objects. Lift and place the bathtub into position.

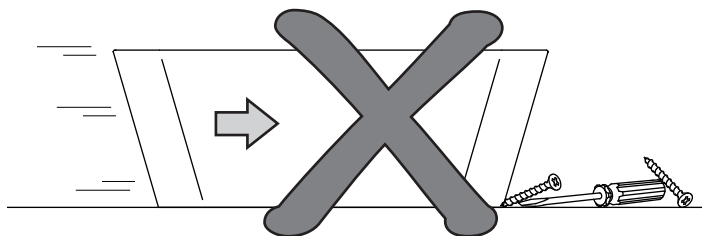


- **Do not** drop the bathtub!

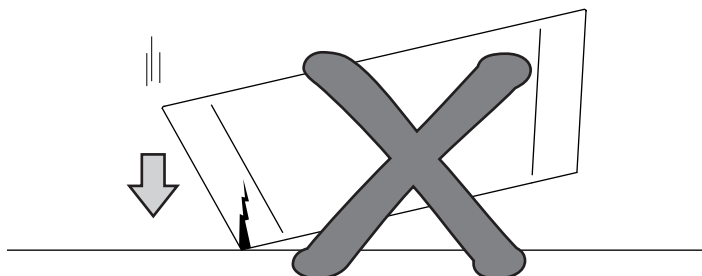

## 2 Installation - preparation

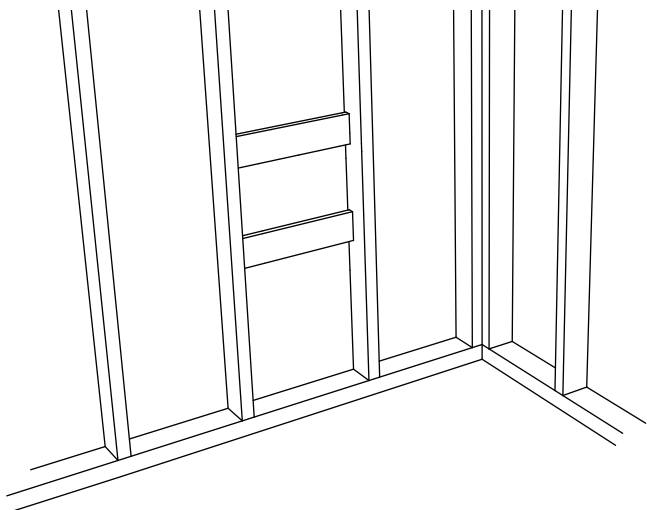


- Construct a plumb stud pocket or wall if required.

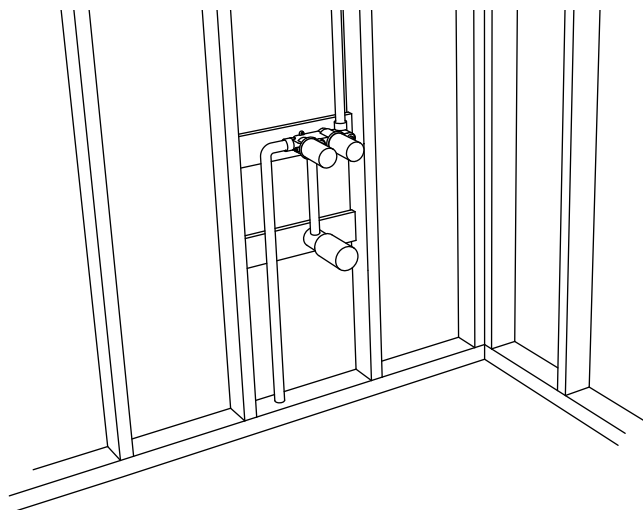


- Install the rough plumbing.

### 3 Installation - preparation

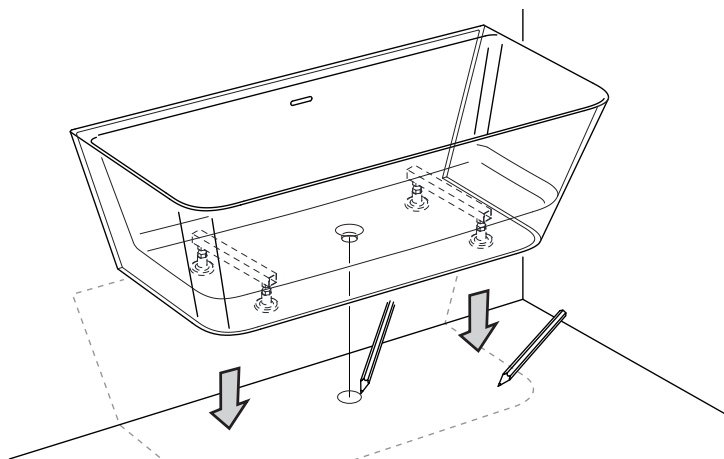


- Under floor access is required for plumbing of bath tub waste and overflow.
- It is recommended that ITD5135 be used for ease of installation.

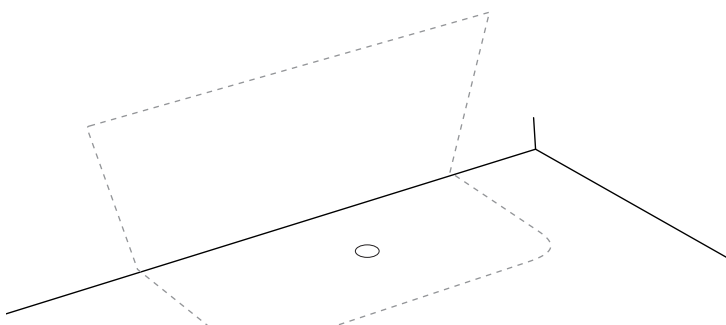


- Waste connection is dependent on the site situation. Final decision about installation of waste connection should be taken by a suitably qualified installer.

### 4 Installation

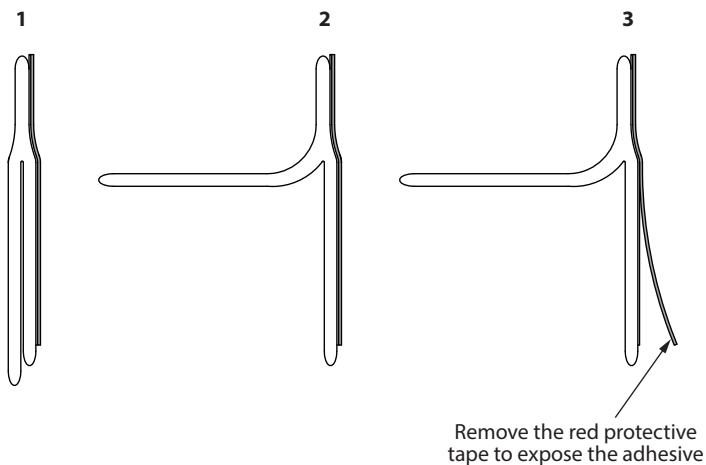


- Prepare to add the sealing flange by separating the surfaces of the strip in three steps.

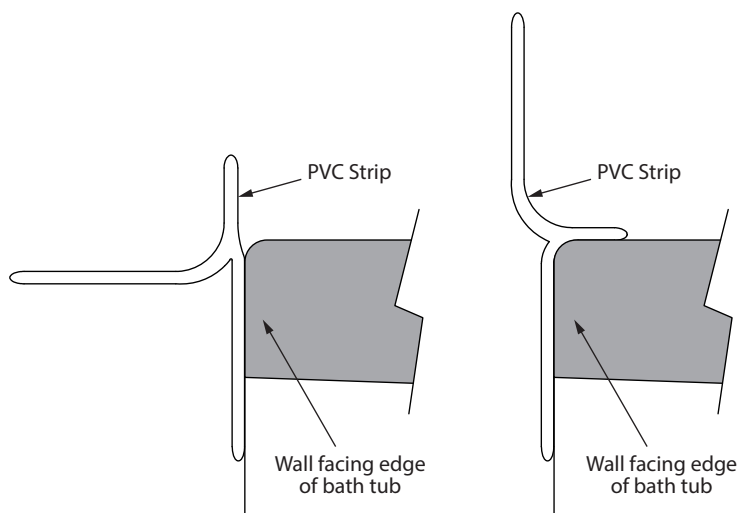


- Add the sealing flange to the edge of the bathtub which will sit against the wall.
- Once the sealing flange is attached to the bathtub, cut off the ends to the appropriate length.

### 5 Installation

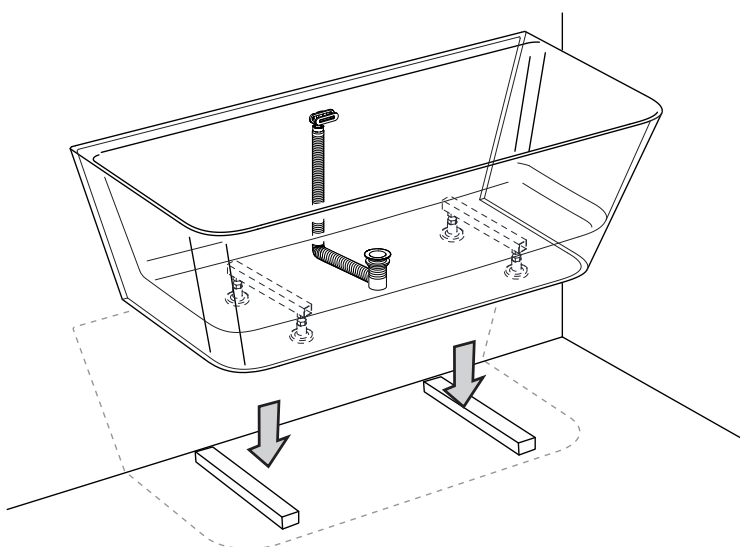


- Fit the bathtub and overflow waste as per the manufacturer's instructions.

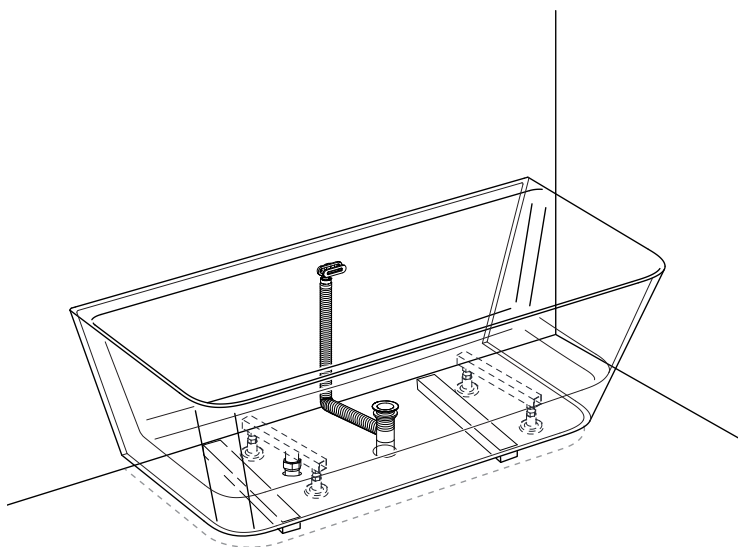


- Place the bathtub on two wooden blocks over the waste connections. Connect both wastes, fill the bathtub with water and check for leaks.

## 6 Installation

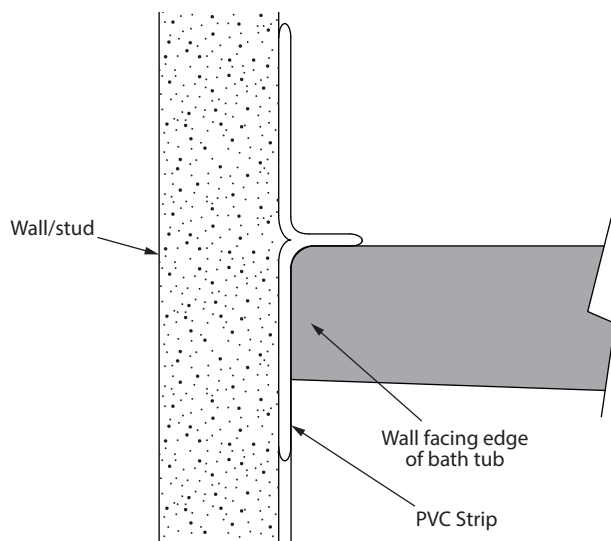


- A water barrier has now been created between the PVC strip and the bathtub.

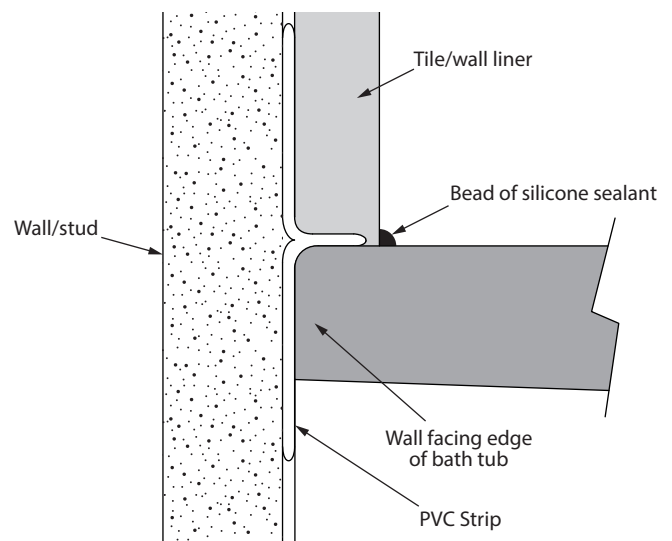

- Wall tiles can now be fixed onto the wall and down to the bathtub.

## 7 Installation

- Finally, seal the bathtub around the floor with a bead of silicone.

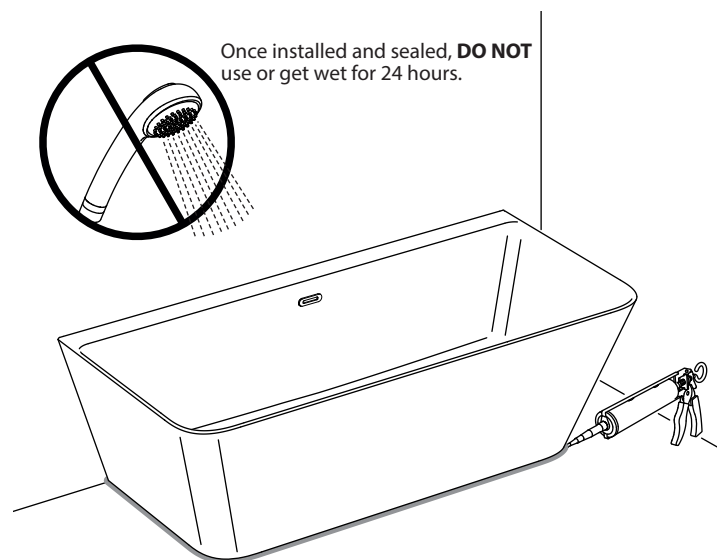

## 8 Cleaning Instructions

Clean the bath regularly with non-abrasive soap and warm water. Fully rinse after cleaning.

While Clearstone is highly stain resistant, it is recommended that bath water containing additives such as oils or salts is always drained and rinsed immediately after use.

Please note that hair dyes and color cosmetics (eg. mascara, lipstick, face powder) may leave a slight discoloration if not removed immediately. If any strong chemicals come into contact with the bathtub, remove and rinse immediately.

Water temperature should not exceed 49°C/120°F.

For a fine scratch or a slight mark, use a 1500 grade sandpaper. Gently sand the area with water. For best results, limit sanding to the smallest possible area around the scratch. Re-polish the surface afterwards using a neutral polishing compound or toothpaste. It may be possible to polish very fine scratches away without using abrasive papers: scrub gently with a soft brush or plastic pad (not metal scouring pad) and a mildly abrasive cream cleaner. Afterwards scrub the whole area with plenty of clean water and re-polish as before.

If the scratch or mark is too deep and cannot be repaired using the above method, it is possible to purchase a repair kit **US-CRK**. In order to remove the scratches, follow the instructions included with the kit.

**Warranty** - This **Crosswater London** product is covered by a limited lifetime warranty. For full details, terms and conditions please visit our website.

For further information contact: **Crosswater London**, 393 Fortune Blvd., Milford, MA 01757

[www.crosswaterlondon.com](http://www.crosswaterlondon.com)

Toll free number: 844-XWATER-1 (844-992-8371) tel: 508-381-0433 fax: 508-381-6068


email: [technical@crosswaterlondon.com](mailto:technical@crosswaterlondon.com)

Issue date: 09302020

## Exposed Bath Waste and Overflow

US-BTW0231

### Installation Instructions

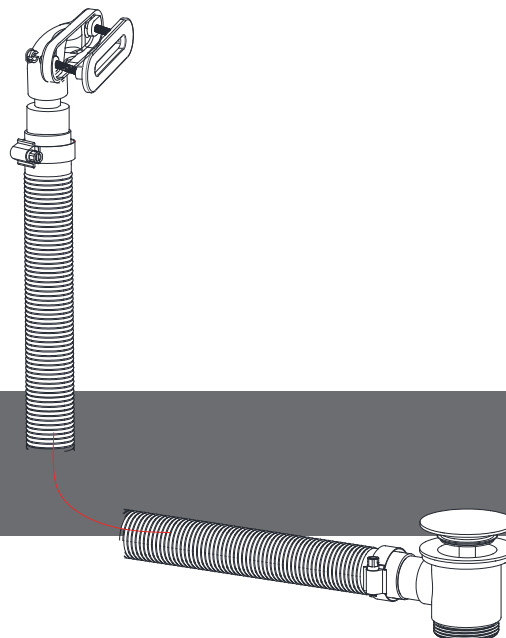

#### Introduction

The bathtub waste has been fully inspected throughout the production process and only leaves our factory after a 15-step QC process.

Carefully remove the bathtub waste from the box and check that all parts have been supplied.

Before beginning installation of the bathtub waste please check for any damage that may have occurred during transport.

**Note: Damage claims cannot be made during or after installation.**

Improper installation shall result in loss of warranty in case of damage caused by impacts or rubbing against rough surfaces.

**IMPORTANT: Please read these instructions carefully before beginning and retain for future reference.**

**We do not accept responsibility for any problems that may occur through incorrect installation.**

#### Installation notes

The installation must comply with all plumbing codes including local codes.

**IMPORTANT: All final connections are made below the finished floor. Accessibility below the finished floor is recommended.**

However, Island Tub Drain ITD5135 (sold separately) allows for a freestanding tub to be installed over a finished floor. This item is highly recommended for ease of installation.

Take all necessary precautions to ensure the bathtub is protected during installation.

**IMPORTANT: Do not overtighten the waste as this may cause damage. Use a torque wrench set to a torque force of between 18.5 lbf.ft and 36.5 lbf.ft.**

**WARNING! Please check for any hidden pipes and cables, electric or otherwise, before drilling holes in a wall or floor.**

#### Cleaning Instructions

Rinse away any traces of soap and gently dry with a clean, soft cloth after each use. Rinse completely with water and dry any overspray. This will maintain the finish and avoid water spotting.

To remove mineral deposits, use a 50/50 solution of white vinegar and water. Do not allow the solution to soak on the product.

Simichrome Polish<sup>®</sup> contains a protective film to enhance maintenance and is helpful in preventing water spot buildup. Follow instructions to ensure optimum results.






Never use an abrasive material such as a brush or scouring pad to clean the surface. The use of abrasive cleaners, cleansers or disinfectants will alter the surface finish and void the warranty.

Do not allow certain materials such as toothpaste, cologne, shaving cream, nail polish remover, vinegar, wine, drain and glass cleaners to remain on the surface. Prolonged contact will alter surface finishes and void the warranty.


**We DO NOT recommend using any household cleaners as many can cause damage to the finish.**

Please see the website for care instructions for specific finishes.

#### Tools required

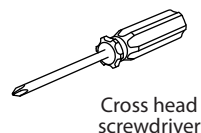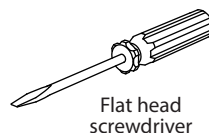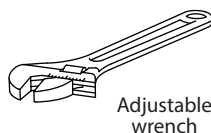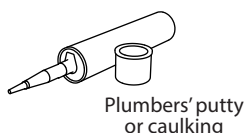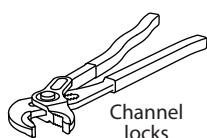

## US-BTW0231 Bath waste

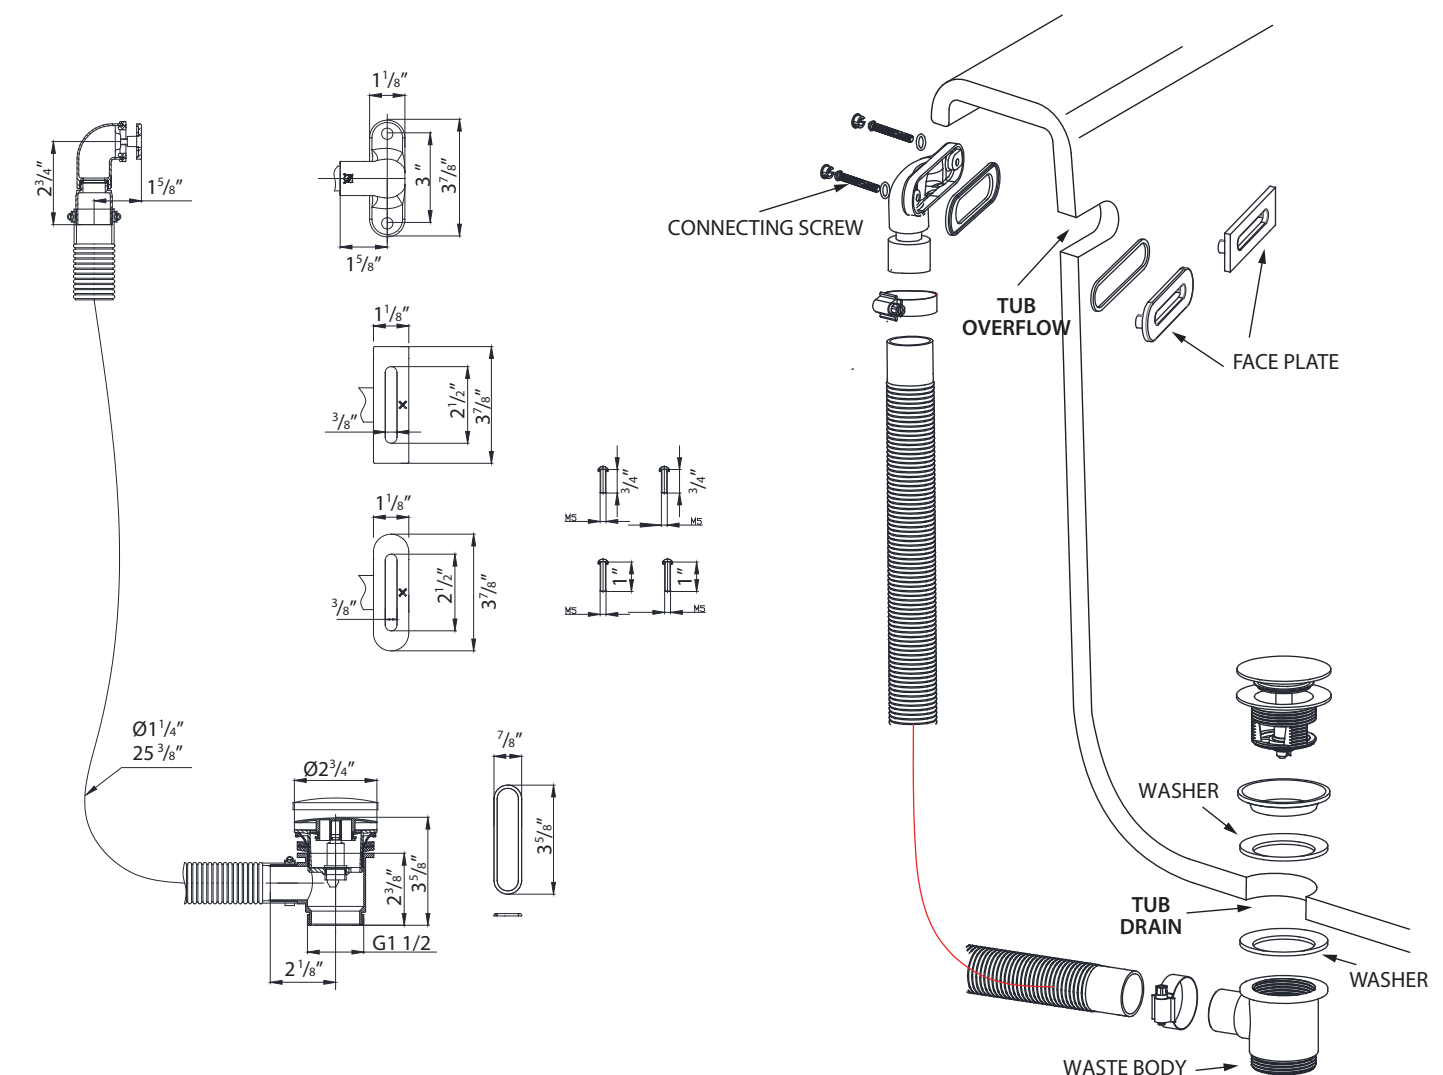

Tub thicknesses range from 9/16" to 3/4". Please check and use the appropriate connecting screw from the table below.

<b>US-BTW0231C/N Screw</b>	<b>total length</b>	<b>thread length</b>	<b>min. bath thickness</b>	<b>max. bath thickness</b>
Screw 1	1 1/16"	15/16"	5/8"	13/16"
Screw 2	15/16"	3/4"	7/16"	5/8"

## Installation

- Fit overflow as shown in diagram above.
- Overflow connecting screw can be cut to fit the thickness of the bathtub.
- Install the waste onto the bathtub as shown.
- Items below the floor are not supplied - suitable plumbing products to be sourced by the installer.

**Warranty** - This **Crosswater London** product is covered by a limited lifetime mechanical warranty. For full details, terms and conditions please visit our website.

For further information contact: **Crosswater London**, 393 Fortune Blvd., Milford, MA 01757

**www.crosswaterlondon.com**

Toll free number: 844-XWATER-1 (844-992-8371)    tel: 508-381-0433    fax: 508-381-6068

email: [technical@crosswaterlondon.com](mailto:technical@crosswaterlondon.com)

Issue date: 20112019